

for AT Tiny85

```
avrdude -v -pattiny85 -cusbasp -Pusb -e -Uefuse:w:0xff:m -Uhfuse:w:0xdf:m -  
Ulfuse:w:0xe2:m -B3
```

For ATmega328p

```
avrdude -v -patmega328p -cusbasp -Pusb -e -Ulock:w:0x3F:m -Uefuse:w:0x05:m -  
Uhfuse:w:0xDE:m -Ulfuse:w:0xFF:m -B3
```

From:

<https://kornequipped.com/mywiki/> - **KornEquipped**

Permanent link:

https://kornequipped.com/mywiki/doku.php?id=atmel_initial_fuse_setup

Last update: **2026/01/31 11:22**

