

## To read a file

```
avrdude -v -patmega328p -cusbasp -Pusb -e -U flash:r:flash.bin:r
```

## To write a file

```
avrdude -v -patmega328p -cusbasp -Pusb -e -U flash:w:flash.hex:i
```

## Set Fuses for AT Tiny85

```
avrdude -v -pattiny85 -cusbasp -Pusb -e -Uefuse:w:0xff:m -Uhfuse:w:0xdf:m -Ulfuse:w:0xe2:m -B3
```

## Set Fuses for ATmega328p

```
avrdude -v -patmega328p -cusbasp -Pusb -e -Ulock:w:0x3F:m -Uefuse:w:0x05:m -Uhfuse:w:0xDE:m -Ulfuse:w:0xFF:m -B3
```

To disable reset pin on ATTINY85 set HFUSE TO 57....

From:

<https://kornequipped.com/mywiki/> - **KornEquipped**

Permanent link:

[https://kornequipped.com/mywiki/doku.php?id=avrdude\\_flashing\\_commands](https://kornequipped.com/mywiki/doku.php?id=avrdude_flashing_commands)

Last update: **2026/01/31 11:54**

