
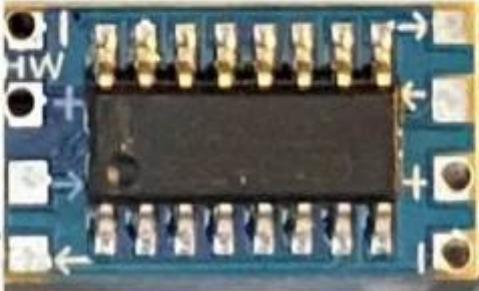


RS-232 LEVELS	MAX3232 DRIVER	LOGIC LEVELS
GND		TTL-OUT
VCC		TTL-IN
232-IN		VCC
232-OUT		GND
<hr style="border: 2px solid red;"/>		
RS-232 LEVELS	VCC +3.3V or +5V	LOGIC LEVELS
232-OUT		GND
232-IN		VCC
VCC		TTL-IN
GND		TTL-OUT

From:
<https://kornequipped.com/mywiki/> - KornEquipped

Permanent link:
https://kornequipped.com/mywiki/doku.php?id=mini_max232_module

Last update: 2026/01/30 22:53

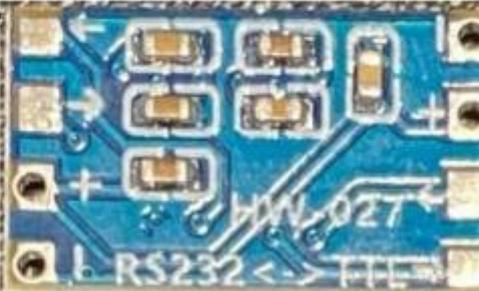